

FEATURES

See Manager Instructions for additional features.

USER COMBINATION

- + Open Lock
- + Change Combination

KEYPAD BACKLIGHTING

- + Press either lightbulb icon to illuminate panel keys.

WRONG TRY PENALTY

- + Four (4) consecutive invalid combination initiates five (5) minute delay period.

LOW BATTERY WARNING

- + Repeated LED flashing and beeping during opening indicates battery is low and needs immediate replacement.

AUDIO AND VISUAL SIGNAL

- + Double signal - two (2) LED flashes and two (2) beeps - indicates entry is valid or accepted.
- + Triple signal - three (3) LED flashes and three (3) beeps - indicates invalid or not accepted.

OPENING THE LOCK

1. Enter valid combination (factory set to 1-2-3-4-5-6).
2. The lock will indicate a valid combination entry with a double signal.
3. Within four (4) seconds, turn the keypad to the open position (clock-wise) if using a dead bolt style lock, or turn the handle to the open position if using a swing bolt style lock.
4. Pull door open.

- + **Invalid Combination Entry** - Lock will signal three (3) times.

IMPORTANT NOTE: Change the combination before putting the lock into operation.

WRONG TRY PENALTY

- + Entry of four (4) consecutive invalid combinations starts a five (5) minute delay period.
 - LED flashes red at ten (10) second intervals.
- + At the end of the delay period, two (2) more consecutive invalid combinations will restart the five (5) minute delay period.

NOTE: Entry will not respond to keystrokes during delay period.

CHANGING YOUR COMBINATION

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

1. Enter "zero" six times.
2. Enter your existing six (6) digit combination one time.
3. Enter your NEW six (6) digit combination two times.
4. If a mistake is made wait thirty (30) seconds and repeat steps 1 - 3.
5. Test lock operation several times before closing the door.

CAUTION: When selecting a combination do not use birthday or other predictable data that could give correlation between the user and combination. Keep the combination secret.

- + **Valid Combination Entry** - Double signal after valid six (6) digit combination is entered.
- + **Invalid Combination Entry** - Triple signal indicates the old combination is still valid.

KEYPAD BACKLIGHT

- + Press either lightbulb icon
- + Panel keys will remain lighted for approximately 8 seconds
- + The backlight feature will not adversely affect battery life if done in conjunction with normal anticipated keypad usage.


BATTERY LOW WARNING

- + Repeated LED flashing and beeping during an opening indicates that the battery is low and needs immediate replacement.
- + Uses one (1) 9-Volt alkaline battery only. (Example: Duracell™ or Eveready™ alkaline batteries.) The replacement of batteries at least once annually is recommended.

If battery is depleted and will not allow lock to open, follow instructions below. Lock contains a non-volatile memory. Even with batteries removed, the lock will retain all programming.

CHANGING YOUR BATTERY

1. Open the battery door (black plastic compartment cover located at the bottom of the keypad) by gently pulling the tab down and to the right.
2. Allow the battery and its attached leads to drop down and out of the battery compartment. If it does not drop, gently pull on the battery until it drops out.
3. Remove the connector by unsnapping it from the two terminals on the top of the battery.
4. Press and hold the zero (0) key for ten (10) seconds before installing a battery.
5. Connect a new 9-Volt Alkaline battery to the battery clip.
6. Gently push the battery and the leads completely into the battery compartment.
7. Close the battery door by rotating it up and to the left, gently pressing the latch side into place.

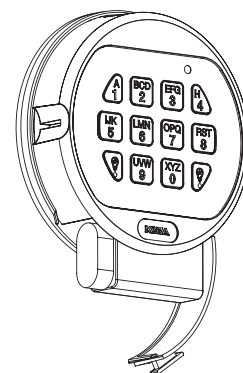

Mounting Instructions available at : www.smartlock.com.au | www.smartlock.co.nz

NOTE: Any audit features, the software features, features associated with peripheral devices and systems, optional interconnect devices and their associated features, features involving the use of user keys, the duress feature, monitoring features, remote features, and other additional features have not been evaluated by UL. Models 8130 and 3190 keypads are not certified by UL, are not UL listed, and not approved for UL applications.