



# Contents

- 1. TO POWER UP** ..... 2
- 2. TO OPEN** ..... 2
- 3. TO OPEN (DUAL COMBO)** ..... 3
- 4. CHANGING COMBO - Users and Manager (only digit)** ..... 4
- 5. CHANGING COMBO - Users and Manager (with dallas key)** ..... 5
- 6. CHANGING COMBO - Master (always only digit)** ..... 6
- 7. MANAGER MENU** ..... 7
  - 7.1 Users Administration ..... 7
    - 7.1.1 User enabled ..... 8
    - 7.1.2 User disabled ..... 8
    - 7.1.3 User deleted ..... 9
    - 7.1.4 User blocked ..... 9
  - 7.2 Time Delay ..... 10
  - 7.3 Audit Download ..... 11
- 8. TIME MENU** ..... 12
  - 8.1 Immediate Time Lock ..... 12
  - 8.2 Temporary Time Lock ..... 13
  - 8.3 Open Extension Time Lock ..... 14
- 9. MASTER MENU** ..... 15
  - 9.1 Time / Date ..... 15
  - 9.2 Time Lock - Standard Week ..... 16
    - 9.2.1 ADD / MODIFY Standard Week ..... 16
    - 9.2.2 VERIFY opening period ..... 17
  - 9.3 2<sup>nd</sup> Time Lock – Standard Week ..... 18
    - 9.3.1 ADD / MODIFY Standard Week (2<sup>nd</sup> TL) ..... 18
    - 9.3.2 VERIFY opening period (2<sup>nd</sup> TL) ..... 19
  - 9.4 Time Lock - Special Events ..... 20
    - 9.4.1 ADD /MODIFY Special events ..... 20
    - 9.4.2 VERIFY Special events ..... 21
  - 9.5 PC Link ..... 22
  - 9.6 System Setup ..... 23
    - 9.6.1 Install Lock ..... 23
    - 9.6.2 Remove Lock ..... 24
    - 9.6.3 Assign lock ..... 24
    - 9.6.4 Info ..... 25
  - 9.7 Manager delete ..... 26



## 1. TO POWER UP

Press any button till display shows "ENTER COMBO" (or "SELECT LOCK" when two, or more, locks are installed): display will power-off after 30 seconds if no operation.

## 2. TO OPEN

*Select door if Multi-Lock mode.*

ENTER COMBO  
XX-XXXXXX

### 1. Enter your user ID and combo (and insert the dallas key)\*

If combo is valid, LCD shows "OPEN":

OPEN!

Open the Door within 3 seconds. Before power-off, LCD shows current date and time.

Otherwise, in case of Time Delay

### 2. LCD shows:

TIME DELAY  
14:31

Counting is updated every second. Counting mode is a selectable feature (count-up, count-down or invisible).

### 3. After Time Delay has elapsed, display shows "mm:ss" (open window counting).

03:51  
XX-XXXXXX

### 4. Enter again your user ID and combo (and insert a dallas key)\* to open.

OPEN!

**N.B.:** If the combo is wrong, display shows:

NOT VALID  
USER!

It's possible to abort time delay counting in every moment by pressing "0". Display shows:

DELAY ABORTED!

**\*: only in dallas key Mode**

### 3. TO OPEN (DUAL COMBO)

Select door if Multi-Lock mode.

ENTER COMBO  
XX-XXXXXX

#### 1. Type user ID and combo (and insert dallas key)\*

If combo is valid, you must type a different user ID and combo (and insert dallas Key). If valid combo, LCD shows "OPEN":

2nd COMBO  
XX-XXXXXX

Open the door within 3 seconds. Before power-off, LCD shows current date and time.

OPEN!

Otherwise, in case of Time Delay

#### 2. LCD shows:

Counting is updated every second. Counting mode is a selectable feature(count-up, count-down or invisible).

TIME DELAY  
14:31

#### 3. After Time Delay has elapsed, display shows "mm:ss" (open window counting).

03:51  
XX-XXXXXX

#### 4. Enter a valid combo (and insert a dallas key)\* and then the second combo (and insert a dallas key)\* to open.

2nd COMBO  
XX-XXXXXX

OPEN!

**N.B.:** If combo is wrong, display shows:

NOT VALID  
USER!

It's possible to abort time delay counting in every moment by pressing "0". Display shows:

DELAY ABORTED!

**If Override user (#49) is installed with Dual combo, first You have to enter User #49 combo (and dallas Key).\***

**\*: only in dallas key Mode**



#### 4. CHANGING COMBO - Users and Manager (only digit)

Press any button to power up, select door if Multi-Lock mode; display shows:

ENTER COMBO  
XX-XXXXXX

1. **Enter user ID and enter " 0" six times.** LCD shows:

OLD CODE  
04-XXXXXX

2. **Enter an OLD valid combo.** LCD shows:

NEW CODE  
04-XXXXXX

3. **Enter a NEW valid combo,** LCD shows:

CONFIRM NEW  
04-XXXXXX

4. **Enter the NEW combo again,** LCD shows:

MANAGER CODE  
UPDATED!

USER CODE  
UPDATED!

In case of mistake, the display shows:

ERROR!

**Note: ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN.**

Test lock operation several times before closing the door.

In case of mistake, the old combo keeps in memory. Wait thirty seconds and repeat the procedure.

## 5. CHANGING COMBO - Users and Manager (with dallas key)

Press any button to power up, select door if Multi-Lock mode; display shows:

ENTER COMBO  
XX-XXXXXX

1. **Enter user ID and " 0" six times**, LCD shows:

OLD CODE  
04-XXXXXX

2. **Enter an OLD valid combo and insert dallas key**. LCD shows:

INSERT  
DALLAS KEY

3. **Enter a NEW valid combo**, LCD shows:

NEW CODE  
04-XXXXXX

4. **Enter a NEW combo again and insert dallas key**,

LCD shows:

MANAGER  
UPDATED

USER CODE  
UPDATED

In case of mistake, display shows:

ERROR!

**Note: ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN.**

Test lock operation several times before closing the door.

In case of mistake, the old combo keeps in memory. Wait thirty seconds and repeat the procedure



## 6. CHANGING COMBO - Master (always only digit)

Press any button to power up; display shows:

ENTER COMBO  
XX-XXXXXX

1. **Hold down "0"** until display shows:

MASTER  
XXXXXXXX

2. **Enter "0" eight times.** LCD shows:

OLD CODE  
XXXXXXXX

3. **Enter the valid Master combo.** LCD shows:

NEW CODE  
XXXXXXXX

4. **Enter a valid NEW Master combo.** LCD shows:

CONFIRM NEW  
XXXXXXXX

5. **Enter the NEW Master combo again.** LCD shows:

MASTER CODE  
UPDATED!

In case of mistake, display shows:

ERROR!

**Note:** In case of mistake, the old combo keeps in memory.  
Wait thirty seconds and repeat the procedure.



## 7. MANAGER MENU

Manager Menu allows to access to following functions:

- **Users Administration** (install, delete, disable/enable)
- **Setup Time Delay**
- **Audit List**

### Access Manager Menu

Press any button to power up ; select door if Multi-Lock mode; display shows:

ENTER COMBO  
XX-XXXXXX

**Hold down OK** until display shows:

MANAGER  
XXXXXX

**Enter Manager combo.** (default: 1-1-1-1-1-1)

If Dallas key Mode is active, insert Manager's Key.

### 7.1 Users Administration

This function allows to manage all users in each lock.

**Access Manager Menu** (see **Manager Menu** page 7).

If valid Manager code is entered, LCD shows:

USERS ON/OFF

Press **OK** to access users administration function. LCD shows:

 
SELECT  
USER ID = XX

Enter user ID (ex: 05 for user 5). Four conditions are possible:




### 7.1.1 User enabled

Display shows:




If You want to disable user:

 - Press **OK**
- LCD shows




Otherwise,

 - Press **P** and LCD shows:




If you want to delete user:

 - Press **OK**
- LCD shows




Otherwise,

 - Press **P** and LCD shows:




### 7.1.2 User disabled

 Display shows:



If You want to enable user:

 - Press **OK**
- LCD shows



Otherwise,

- Press **P** and LCD shows:



If you want to delete user:





- Press **OK**
- LCD shows

USER ID = 05  
DELETED!

Otherwise,

- Press **P** and LCD shows:

SELECT  
USER ID = XX

### 7.1.3 User deleted

Display shows:

05 DELETED!  
INSTALL?

If You want to install user:

- Press **OK**
- LCD shows

NEW CODE  
05-XXXXXX

Enter user code,

- Press **OK** and LCD shows:

CONFIRM NEW  
05-XXXXXX

Enter user code again:

- Press **OK** (and insert dallas key)\*
- LCD shows

USER ID = 05  
ENABLED!

Otherwise,

- Press **P** and LCD shows:

SELECT  
USER ID = XX

### 7.1.4 User blocked

Display shows:

USER ID = 05  
NOT VALID!

**\*: only in dallas key Mode**

## 7.2 Time Delay

This function allows to change Time delay values in each lock.

**Access Manager Menu** (see **Manager Menu** page 7).

If valid Manager code is entered, LCD shows:

USERS ON/OFF

Press **P** to select Time Delay Menu. LCD shows:

TIME DELAY

Press **OK** to access Time Delay Menu. LCD shows the current values:

DELAY XX  
OPEN XX

Press **OK** again to setup the new values:

Digit the new values ( insert two digits :ex. 08 – 02).

DELAY 08  
OPEN 02

Press **OK** to confirm new values.

LCD shows:

OK, UPDATED  
VALUES!

If You select a lower Time Delay value and You confirm with **OK** button, old Time Delay counting starts automatically; when Time delay counting is elapsed and open window period starts, LG Master has updated TD values. You have to wait that open period is finished.

Press **P** to select the next programming window.

### **7.3 Audit Download**

This function allows to download lock's audit.

**It is necessary to use a specific cable and a specific software to link to a Personal Computer. (art. L42160/J)**

**Access Manager Menu** (see **Manager Menu** page 7).

USERS ON/OFF

Press **P** until LCD shows:

DOWNLOAD  
AUDIT

Press **OK** to start download. LCD shows:

DOWNLD.AUDIT  
ENABLED \*\*

**Note.** You can repeat this operation several times without any problems because It is not possible to delete Audit List from lock.

## 8. TIME MENU

Time Menu allows to access to following functions:

- **Immediate Time Lock** – immediate closing until the next opening period.

**Note** This function is available only if one opening period is stored in Time Lock Standard Week. See Page 16.

- **Temporary Time Lock** – immediate closing until Time and Date programmed (max 4 weeks).

- **Extension Time Lock** (active only if available from PC) – increase the next closing period (30 min. max 4 times).

**Note 1** This menu is available only if one opening period is stored in Time Lock Standard Week (section 9.2).

**Note 2** The features of this menu affect only the main Time Lock (section 9.2), not the 2<sup>nd</sup> Time Lock (section 9.3).

### 8.1 Immediate Time Lock

Press any button to power up, select door if Multi-Lock mode; display shows:

ENTER COMBO  
XX-XXXXXX

**Hold down P** until LCD shows:

TIME MENU  
XXXXXX

**Enter Manager code (or a valid user code if the feature is extended to users, too).** (default: 1-1-1-1-1-1)

If code is valid, LCD shows:

IMMEDIATE  
TIME LOCK?

Press **OK** to confirm, LCD shows:

Do You  
CONFIRM?

Press **OK** to confirm again.



If List of Time Lock Standard Week is empty, the function is not available and LCD shows:

NO OPEN PER.  
PROGRAMMED

## **8.2 Temporary Time Lock**

Press any button to power up, select door if Multi-Lock mode; display shows:

ENTER COMBO  
XX-XXXXXX

**Hold down** **P** until LCD shows:

TIME MENU  
XXXXXX

**Enter Manager code (or a valid user code if the feature is extended to users, too).** (default: 1-1-1-1-1-1)

If code is valid, LCD shows:

IMMEDIATE TIME  
LOCK?

Press **P** to select the next function.

Display shows:

TEMPORARY  
TIME LOCK?

Press **OK** to confirm. LCD shows:

HH:MM  
DD/MM/YYYY

Insert Time and Date for the next opening period (MAX 4 WEEKS). Press **OK** to confirm.

HH:MM \*  
DD/MM/YYYY

LCD shows:

Do You  
CONFIRM?

Press **OK** to confirm again. LCD shows:

OK TIME LOCK  
ACTIVATED!



If a **MISTAKE** is made inserting Time and Date values, **do not confirm** but press **P** to cancel and then repeat the procedure.

### **8.3 Open Extension Time Lock**

Press any button to power up, select door if Multi-Lock mode; display shows:

ENTER COMBO  
XX-XXXXXX

**Hold down** **P** until LCD shows:

TIME MENU  
XXXXXX

**Enter Manager code.** (default: 1-1-1-1-1-1)

If valid Manager code is entered, LCD shows:

IMMEDIATE  
TIME LOCK?

Press **Twice** **P** to select Extension function. LCD shows:

OPEN PERIOD  
+30 min?

Press **OK** to confirm. LCD shows:

Do You  
CONFIRM?

Press **OK** to confirm again. LCD shows:

The next closing period is increased of 30 min.

OK OPENING  
TIME +30 min

## 9. MASTER MENU

Master Menu allows to access to following functions:

- **Time / Date** (Setup Time and Date)
- **Time Lock Standard Week** (Add/Modify/Verify opening period)
- **2<sup>nd</sup> Time Lock Standard Week** (Add/Modify/Verify opening period)
- **Time Lock Special Events** (Add/Modify/Verify closing period)
- **PC Link** (Open serial port to communicate with PC)
- **Setup** (Install/remove Locks, System Info)
- **Manager** (Delete/Install Manager)

### 9.1 Time / Date

Press any button to power up; display shows:

ENTER COMBO  
XX-XXXXXX

**Hold down 0** (zero) until display shows:

MASTER  
XXXXXXXX

**Enter Master combo.** (default: 1-2-3-4-5-6-7-8)

If valid Master code, LCD shows:

TIME /DATE

Press **OK** to select this function. LCD shows the current Time and Date.

18:30 MON  
10/09/2004

Press **OK** to modify Date /Time.

Insert the new values for Date and Time.

HH:MM  
DD/MM/YYYY

Press **OK** to confirm.

LCD shows the new values for Date and Time:

18:30 MON  
10/09/2004

## 9.2 Time Lock - Standard Week

**In this menu You can enter a new opening period (door opened!), modify and verify all stored opening periods.**

### 9.2.1 ADD / MODIFY Standard Week

Press any button to power up; display shows:

ENTER COMBO  
XX-XXXXXX

**Hold down 0** (zero) until display shows:

MASTER  
XXXXXXXX

**Enter Master combo.** (default: 1-2-3-4-5-6-7-8)

If valid Master code, LCD shows:

TIME/DATE

Press **P** to select the next function. LCD shows\*:

TIME LOCK  
STAND. WEEK

Press **OK** to select Time Lock Standard Week.

STAND.WEEK  
ADD

Press **OK** to Add or Modify the opening period:

🔓 HH:MM MON  
🔒 HH:MM

**THE FIRST IS OPENING TIME AND THE SECOND IS CLOSING TIME. IN THE UPPER RIGHT CORNER YOU WATCH THE DAY OF THE WEEK.**

Enter new values and then press **OK**.

STAND WEEK  
ADD

Press **OK** again to Add a new opening period or to Modify an old record. LCD shows:

🔓 HH:MM MON  
🔒 HH:MM

Enter new values or press **OK** to change day.

**REPEAT THIS PROCEDURE FOR ALL DAYS.**

**\*: If 2<sup>nd</sup> time lock feature has been selected, LCD shows TIME LOCK 1**





 
Press **P** to exit from this procedure.

**VERY IMPORTANT...**


- Standard Week is OPENING PERIOD: safe door CAN BE OPEN if You enter a valid combo. **(for ex. Opening period from 08:00 to 14:00, safe door opens from 08:00 to 14:00 but does not open at 16:00).**
- You can enter FOUR different opening periods for each day. **(for ex: MON from 07:00 to 10:00; from 12:00 to 13:00; from 15 to 16:00; from 18:00 to 19:00).**
- To delete an opening period You must install a new opening period with duration null within the existing one. **(for ex. to delete a opening time from 08:00 to 12:00, enter a new opening period from 10:00 to 10:00).**

**9.2.2 VERIFY opening period**

Press any button to power up, select door if Multi-Lock mode; display shows:




 **Hold down 0** (zero) until display shows:




**Enter Master combo.** (default: 1-2-3-4-5-6-7-8)

 
If valid Master code, LCD shows:



 Press **P** to select the next function. LCD shows\*:



 
Press **OK** to access Standard Week function. LCD shows:



Press **P** to select the next function.



 Press **OK** to see the first opening period stored.



**\*: If 2<sup>nd</sup> time lock feature has been selected, LCD shows TIME LOCK 1**

Press **OK** to scroll all stored opening periods.

**NOTE. To modify a wrong opening period, use the function Time Lock Standard Week ADD. (See 2.1).**

### **9.3 2<sup>nd</sup> Time Lock – Standard Week**

**In this menu (available only if 2<sup>nd</sup> Time Lock feature has been activated) You can enter a new opening period (door opened!), modify and verify all stored opening periods.**

#### **9.3.1 ADD / MODIFY Standard Week (2<sup>nd</sup> TL)**

Press any button to power up; display shows:

ENTER COMBO  
XX-XXXXXX

**Hold down 0** (zero) until display shows:

MASTER  
XXXXXXXX

**Enter Master combo.** (default: 1-2-3-4-5-6-7-8)

If valid Master code, LCD shows:

TIME/DATE

Press twice **P** to select the next function. LCD shows:

TIME LOCK 2  
STAND. WEEK

Press **OK** to select 2<sup>nd</sup> Time Lock Standard Week.

STAND.WEEK  
ADD

Press **OK** to Add or Modify the opening period:

 
🔓 HH:MM MON  
🔒 HH:MM

**THE FIRST IS OPENING TIME AND THE SECOND IS CLOSING TIME.  
IN THE UPPER RIGHT CORNER YOU WATCH THE DAY OF THE  
WEEK.**

Enter new values and then press **OK**.

STAND WEEK  
ADD

Press **OK** again to Add a new opening period or to Modify an old record. LCD shows:



Enter new values or press **OK** to change day.


**REPEAT THIS PROCEDURE FOR ALL DAYS.**

 Press **P** to exit from this procedure.


**NOTE. See 2.1 "Very important..." section.**

### 9.3.2 VERIFY opening period (2<sup>nd</sup> TL)

Press any button to power up, select door if Multi-Lock mode; display shows:




 **Hold down 0** (zero) until display shows:




**Enter Master combo.** (default: 1-2-3-4-5-6-7-8)

 
If valid Master code, LCD shows:



 Press twice **P** to select the next function. LCD shows:



 Press **OK** to access 2<sup>nd</sup> Time Lock Standard Week function. LCD shows:




Press **P** to select the next function.



Press **OK** to see the first opening period stored.

 Press **OK** to scroll all stored opening periods.





## 9.4 Time Lock - Special Events

**In this menu You can enter a new closing period (door closed!!), modify and verify all stored closing period.**

### **4.1 ADD /MODIFY Special events**

Press any button to power up; display shows:

ENTER COMBO  
XX-XXXXXX

**Hold down 0** (zero) until display shows:

MASTER  
XXXXXXXX

**Enter Master combo.** (default: 1-2-3-4-5-6-7-8)

If valid Master code is entered, LCD shows:

TIME /DATE

Press **P** until LCD shows:

TIME LOCK  
SPECIAL EVNT

Press **OK** to select Special Events Menu

SPECIAL EVNT  
ADD

Press **OK** Add or Modify the closing period:

🔒 DD/MM  
🔓 DD/MM

**NOTE: THE FIRST IS THE CLOSING DATE AND THE SECOND IS THE OPENING DATE.**

Enter new values and then press **OK** \*:

🔒 25/12  
🔓 27/12 \*

SPECIAL EVNT  
ADD

**Repeat this procedure for each special events.**

Press **P** to select the next programming window.

\*: Max duration 4 WEEKS.

 


**VERY IMPORTANT...**


- Special Event is a CLOSING PERIOD: the safe door IS BLOCKED! **Special event repeat itself EACH YEAR.**
- You can enter **Twenty Special Events** ( Max FOUR weeks)
- To delete a Special Event, enter a new Special Event with duration null within existing one. **(for ex. To delete a Special Event from 25/12 to 27/12, insert a new Special Event from 26/12 to 26/12).**

**9.4.2 VERIFY Special events**

Press any button to power up , select door if Multi-Lock mode; display shows:




 **Hold down 0** (zero) until display shows:




**Enter Master combo.** (default: 1-2-3-4-5-6-7-8)

 
If valid Master code is entered, LCD shows:



 Press **P** to select the next function. LCD shows:



 Press **OK** to access Special Event function. LCD shows:



Press **P** to select next function. LCD shows:



Press **OK** to see the first closing period stored. Ex:



Press **OK** to scroll all stored opening periods.

**To modify a wrong Special Event, use the function Time Lock Special Event ADD. (See 3.1).**



## 9.5 PC Link

Press any button to power up; display shows:

ENTER COMBO  
XX-XXXXXX

**Hold down 0** (zero) until display shows:

MASTER  
XXXXXXXX

**Enter Master combo.** (default: 1-2-3-4-5-6-7-8)

If valid Master code is entered, LCD shows:

TIME /DATE

Press **P** until LCD shows:

PC LINK

Press **OK** to open the communication with the PC.

PC LINK  
ENABLED \*\*

Press **P** to stop the communication.

PC LINK

## **9.6 System Setup**

System Setup allows to access to following functions:

- **Install Lock**
- **Remove Lock**
- **Assign lock**
- **Sys Info**

Press any button to power up; display shows:

ENTER COMBO  
XX-XXXXXX

**Hold down 0** (zero) until display shows:

MASTER  
XXXXXXXX

**Enter Master combo.** (default: 1-2-3-4-5-6-7-8)

If valid Master code is entered, LCD shows:

TIME /DATE

Press **P** until LCD shows:

SYSTEM SETUP

### **9.6.1 Install Lock**

Press **OK** to select this function

LOCK  
INSTALL

Press **OK** to install new lock, LCD shows:

ENTER COMBO  
XXXXXX

Enter Installation Code (default 505050).

Enter ID number (Start always with ID=1).

SELECT  
LOCK ID =

Press **OK** to install the new lock. Press **OK** another time to confirm.

Do You  
CONFIRM ?

If LCD shows the following windows, LG Master does not communicate with lock. Check lock ID.

LOCK NOT  
READY !



### 9.6.2 Remove Lock

 
Press **OK** to enter in System Setup Menu




Press **P** to select next function, LCD shows:




Press **OK** to enter in remove lock menu, LCD shows:  
Enter Installation Code (default 505050).



Enter lock ID number.

 


Press **OK** to remove selected lock:

 

LCD shows:



 Press **OK** to confirm and remove the lock.



When a lock is removed, It is not possible to re-install immediately.

You have to reset with reset-box and then re-programme with the PC software.


### 9.6.3 Assign lock

 It's the menu to assign Time lock to the locks or to exclude a lock from any Time Lock. If not specified each lock follows the main Time Lock.

Press **OK** to enter in System Setup Menu




Press **P** until LCD shows:








 
Press **OK** to enter in assign lock menu, LCD shows Time Lock Assigned to Lock 1:



 
Press **P** to check the setting of the next lock:



 
Otherwise, press **OK** to change the lock setting. LCD shows:



 
Press **OK** to confirm (or **P** to exit from this menu). LCD shows:



 Press **OK** to change the lock setting (or **P** to check the setting of the next lock). LCD shows:



 Press **OK** to confirm new setting (or **P** to exit from this menu). LCD shows:




After scrolling all the installed locks by pressing **P**, press **P** again to exit from this menu.

### 9.6.4 Info

 
Press **OK** to enter in System Setup Menu.




Press **P** until LCD shows:



Press **OK** to enter Info Menu.

 

Press **P** to exit from Info Menu.

 



## 9.7 Manager delete

Press any button to power up; display shows:

ENTER COMBO  
XX-XXXXXX

**Hold down 0** (zero) until display shows:

MASTER  
XXXXXXXX

**Enter Master combo.** (default: 1-2-3-4-5-6-7-8)

If the valid Master code is entered, LCD shows:

TIME /DATE

Press **P** until LCD shows:

MANAGER

Select door if Multi-Lock mode, Press **OK** to enter Manager menu:

SELECT  
LOCK ID =

If Manger is installed, LCD shows:

MANAGER  
DELETE?

- Press **OK** to remove Manager
- Press **OK** to confirm

Do You  
CONFIRM ?

OK; MANAGER  
REMOVED!

Otherwise, if Manager is deleted, LCD shows:

MANAGER  
INSTALL?

- Press **OK** to install Manager. LCD shows:
- Enter a new manager code
- Enter the code again and Press **OK** to confirm

NEW CODE  
XXXXXX

CONFIRM NEW  
XXXXXX

MANAGER CODE  
UPDATE