


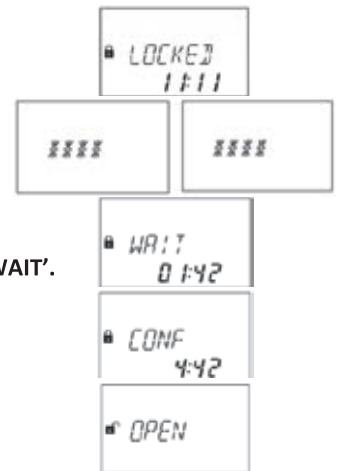

Open Lock

1. **The home screen should say "LOCKED"**
If the home screen does not say locked, wait for the keypad to go to sleep, and start again.
2. **Enter your 8-digit code and press ENTER.**
- If the lock is in Dual User mode the screen will display "CODE 2".
Enter the second 8-digit code and press ENTER.
3. **'DELAY' - Wait out the Time delay.** If there is a time delay activated, the screen will display 'WAIT'.
4. **'CONF' - When the time delay has finished counting, the screen will display 'CONF'.**
Enter your 8 Digit code(s) again, and press ENTER.
NOTE: If the lock is in dual mode – you must enter 2 codes in the CONF window
5. With a valid entry code, the screen displays 'OPEN'. **Open the door.**




Wrong Code

If an incorrect code is entered the display will return to the 'LOCKED' screen. If a correct code entry is made that has been restricted from opening the lock the screen will display "DENIED".
Wait for the keypad to go to sleep and try again.



Penalty time

When your code is denied 4 times, the screen displays 'PENALTY'
You must wait a 5 minute penalty time. Then enter a Correct code.

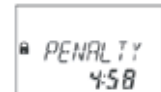

Enable Duress

1. **An external alarm system is required for this feature. When Performing a normal open, Enter the LAST digit of your code one number higher or lower than the last digit of your standard code.**
Eg; if your standard code is 11111111 – to activate Duress enter 11111110 or 11111112.
2. **Lock will open** and display just like a normal open, but the lock will silently trigger the alarm panel.



Changing Codes

1. **First open the lock** – The screen displays 'OPEN'
2. **Press MODE button.** The screen displays 'PRG-MOD'.
3. **Enter a manager code and press ENTER**
4. Use the arrow buttons to **scroll to 'CODE' & press ENTER**
5. **Scroll to 'USER' or 'MANAGER' (depending which code you want to change) & Press ENTER**
6. **Select the user ID# of the user that you wish to change. eg 'USER 11' and Press ENTER**
7. Display shows 'CHANGE?' **Scroll to 'YES' and press ENTER.**
8. **Enter the new 8-digit code and Press ENTER.** (the first two digits must always be the user position.
eg 11XXXXXX).
9. Screen displays 'CONFIRM' **Enter 8-digit code again and press ENTER.**

The screen displays 'Accepted', and your code is now changed.





Add a User

1. **First open the lock** – The screen displays 'OPEN'
2. **Press MODE button.** Screen displays 'PRG-MOD'.
3. **Enter a manager code and press ENTER**
4. Use the arrow buttons to **scroll to 'CODE'** and press ENTER
5. **Scroll to 'USER' & Press ENTER**
6. **Scroll to the user ID# of the user that you wish to delete.** eg 'USER 11'.
7. Press ENTER. The screen displays 4 dashes (waiting for you to enter a code)
8. **Enter an 8-digit code and press ENTER.** (the first two digits must always be the user position. eg 11XXXXXX).
9. Screen displays 'CONFIRM' **Enter the 8-digit code again and press ENTER.**

The screen displays 'Accepted', your user is now added



Delete a User

1. **First open the lock** – The screen displays 'OPEN'
2. **Press MODE button.** Screen displays 'PRG-MOD'.
3. **Enter a Manager code and press ENTER**
4. Use the green arrow buttons to **scroll to 'CODE'** & press ENTER
5. **Scroll to 'USER' & Press ENTER**
6. **Scroll to the user ID# of the user that you wish to delete.** eg 'USER 11'
7. **Press DEL button.** Screen asks 'CLEAR?'
8. Use the green arrow buttons to **scroll to 'YES' & press ENTER**

The screen displays 'ACCEPTED' and the code has been deleted.



Enable Immediate Time Lock

1. **Press MODE.**
2. **Enter your code and press ENTER**
3. When the screen displays 'PROG', **press ENTER**
4. Screen displays 'IMM-TL', **Press ENTER**
5. Enter the duration of time that you want to lock the unit down for and **press ENTER.**
eg. 005:00 = 5 hours, 001:30 = 1.5 hours. You can enter a maximum of 9 hours.
6. Time lock is now activated and there is NO way to bypass this function once activated.

