





### INSTRUCTIONS

#### 2789 SMALL ALARM/BATTERY BOX

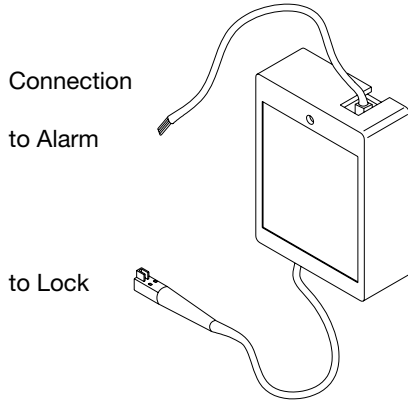


Can be configured as NC or NO  
by changing the internal jumper.

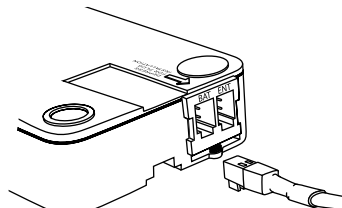

Connect to Lock through  
BAT Port.

#### 4002 LARGE ALARM/BATTERY BOX

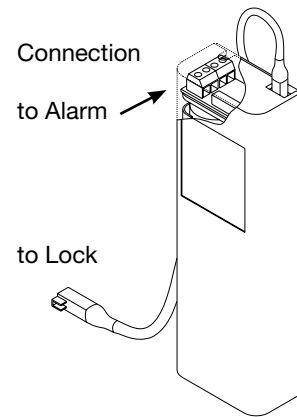

Can be configured as NC or NO  
by changing the internal jumper.

#### 2789 ALARM CABLE CONNECTIONS

4 Wires 26 AWG

##### Alarm Relay Connections

Red and Black

Normally Open (NO) or Normally Closed (NC)

Relay Contacts: Settable

50V DC @ 250 mA Max Load

Switches 1 sec.


##### Remote Input to Disable or Override Lock

Yellow: Positive Input (+)


Green: Negative Input (-)

5-12V DC @ 20 mA Max Input

##### Old Version

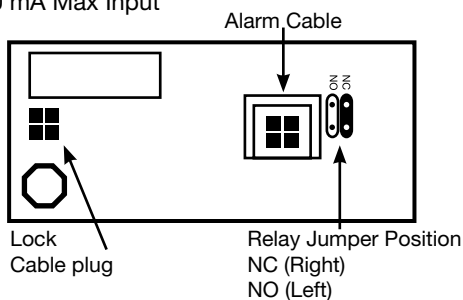

##### New Version

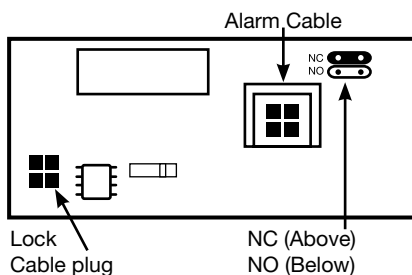

#### 4002 ALARM CONNECTIONS

##### Alarm Relay Connections

Connect OUT to Alarm

Normally Open (NO) or Normally Closed (NC)

Relay Contacts: Settable

50V DC @ 250 mA Max Load

Switches 1 sec.

##### Remote Input to Disable or Override Lock

Connect IN to Remote Control

5-12V DC @ 20 mA Max Input

